

# DIGIPLEX EVO

## User Quick Reference Guide


### AC LIGHT

ON = AC Power  
OFF = Power failure

### STATUS LIGHT

When green:  
ON = Zones closed  
OFF = Zone(s) open  
Flash = Exit delay

When red:  
ON = Area(s) armed  
OFF = Area(s) disarmed  
Flash = Alarm

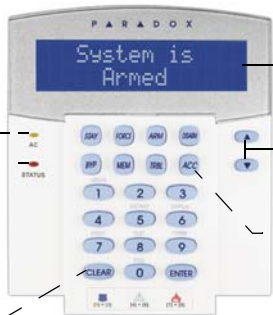

The LCD will guide you with detailed messages.

Use the arrow keys to scroll the menu or choices.

Press the corresponding one-touch button for 2 seconds to perform an action without entering your Access Code.

LCD Keypad

[CLEAR] = Erases current data entry or reverts to the preceding step  
[ENTER] = Saves current data and exits current menu

## HOW TO ARM

1. Enter your [ACCESS CODE] and then:

To Regular Arm: Press the [ARM] key  
(Arms entire area when all zones are closed).

To Force Arm: Press the [FORCE] key  
(Arms entire area without waiting for all zones to close)

To Stay Arm: Press the [STAY] key  
(Arms area's perimeter only, which allows you to remain in the protected area)

To Instant Arm: Press the [5] key  
(Stay arms the area but an alarm will occur instantly any zones open)

2. Select the desired area or press the [0] key for all areas

## HOW TO DISARM

To Disarm when entering:

1. Enter your **[ACCESS CODE]**
2. Select the area(s) if necessary

To Disarm from within the perimeter:

1. Enter your **[ACCESS CODE]** and then press the **[DISARM]** key
2. Select the area(s) if necessary

## PANIC KEYS

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below for two seconds.

Panic Alarm Type	Key Combinations
Police	Keys <b>[1]</b> and <b>[3]</b>
Medical	Keys <b>[4]</b> and <b>[6]</b>
Fire	Keys <b>[7]</b> and <b>[9]</b>

## HOW TO BYPASS ZONES

When a zone is bypassed, it remains unarmed once the corresponding area is armed:

1. Enter your **[ACCESS CODE]**
2. Press the **[BYP]** key
3. Use the **[▲]** or **[▼]** keys to scroll through the zones and then press the **[BYP]** for the desired zone
4. Press **[ENTER]** to save and exit

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Press the **[MEM]** key.  
All zones that were breached during the last armed period will scroll on the screen
2. Press **[CLEAR]** to exit

Some features in this Quick Start need to be activated by your installer.

We recommend that you test your security system on a weekly basis. Please refer to the appropriate user manual

