


# TANE ALARM PRODUCTS



## Installation instructions for SM-35 family of Surface Mount - Door and Window Contacts with Quick Connect Terminals

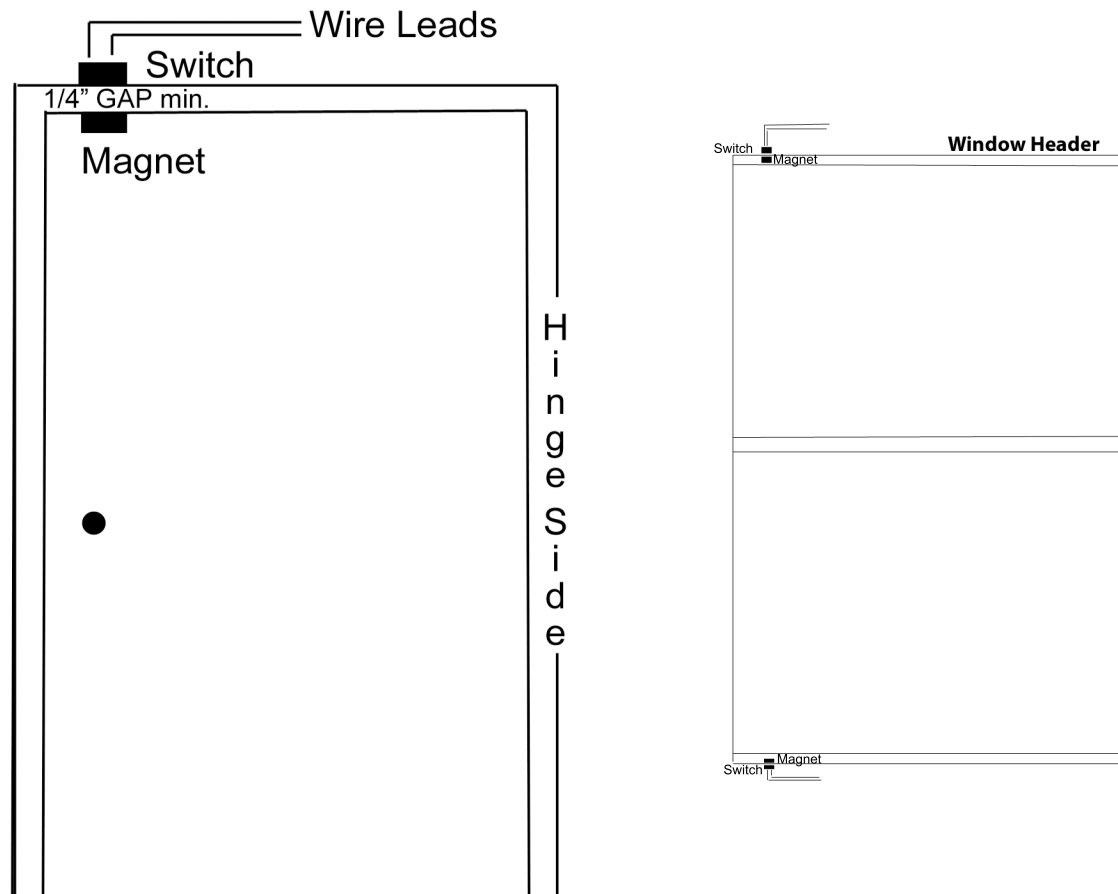

- Surface mount switch at top or side (NOT on hinge side) of door or hinged window frame
- On double hung window, surface mount the switch at top, side or bottom of window frame
- Surface mount the magnet parallel to the switch
- Make sure Gap is not less than 1/4" between switch and magnet
- Insert leads from alarm circuit under terminals
- Designed for use with Steel (use spacers), Wood and other door and window surfaces

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)